 
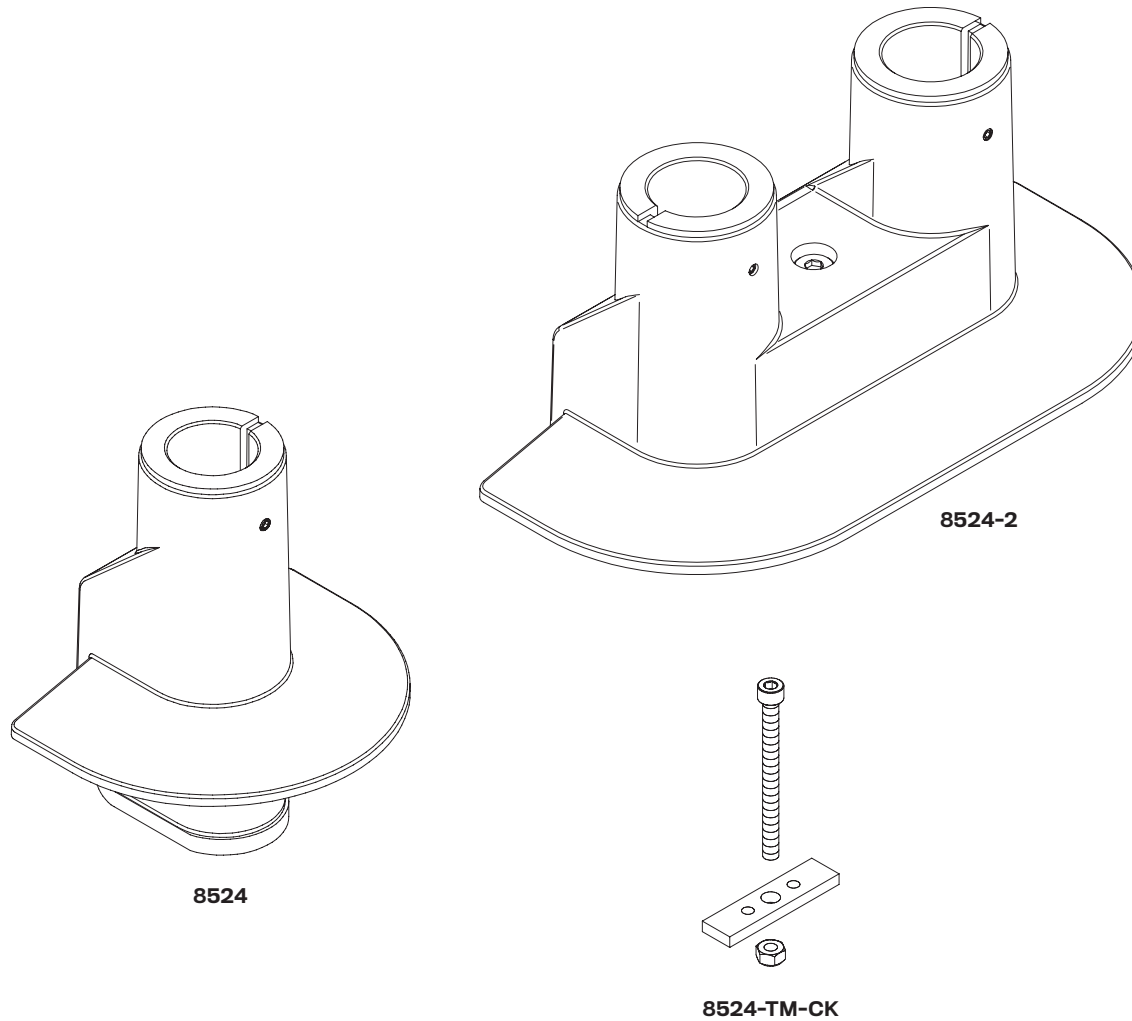 
 


 
 

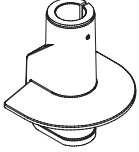 
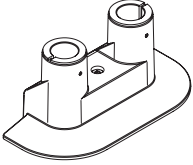 
 


TOP DOWN MOUNTS


Installation Instructions

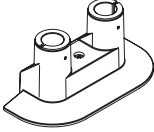



PARTS LIST

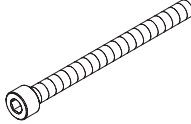	A Single Top Down Mount 8524 	B Dual Top Down Mount 8524-2 	C 5mm Allen Wrench 710838 	D 6mm Allen Wrench 717654 	E M8 x 100mm SHCS 712262 	F Spacer 701544 	G M8 x 1.25 Lock Nut 710015 
8524 	1x	-	-	1x	-	-	-
8524-2 	-	1x	1x	-	-	-	-
8524-TM-CK 	-	-	-	-	1x	1x	1x

 1

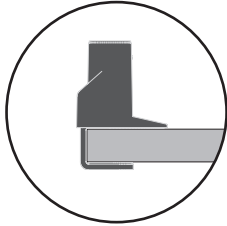


Desk thickness
up to 1.5" (38mm)

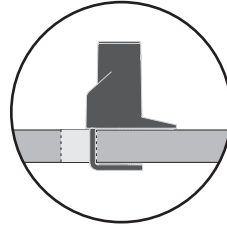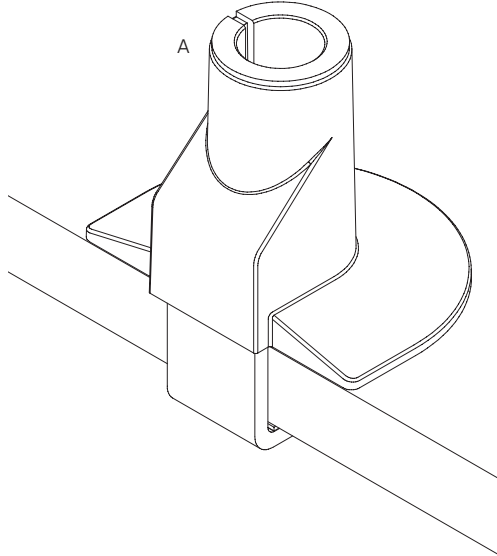  

Desk thickness
up to 1.5" (38mm)

 
OR

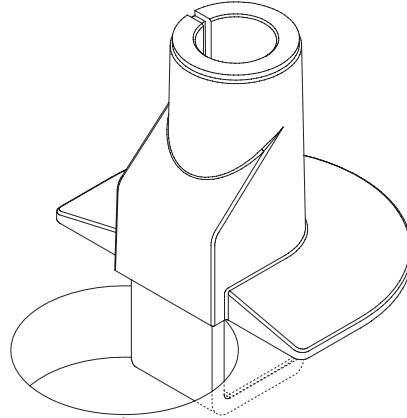


Ø 2" (51mm)
minimum

2

 6mm

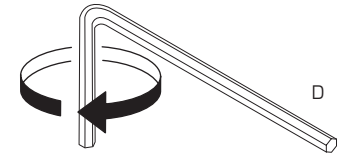


Tighten to
60-80 in-lbs.

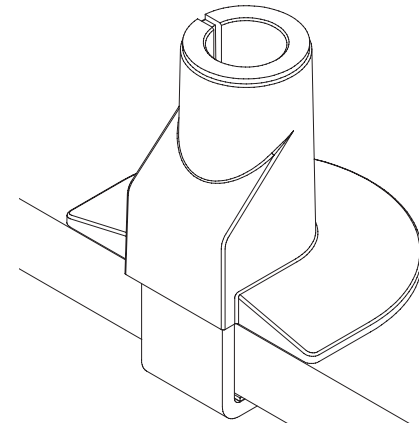 


If the monitor arm or pole does not easily fit into the mount, remove the bushing from the mount and place it on the monitor arm or pole and press firmly back into the mount.

 
2a

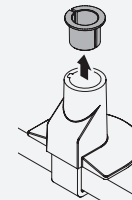


2b

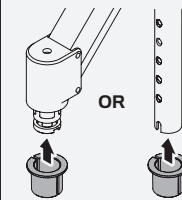 


2c

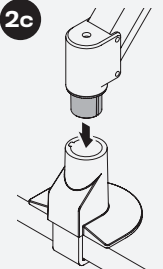 


3

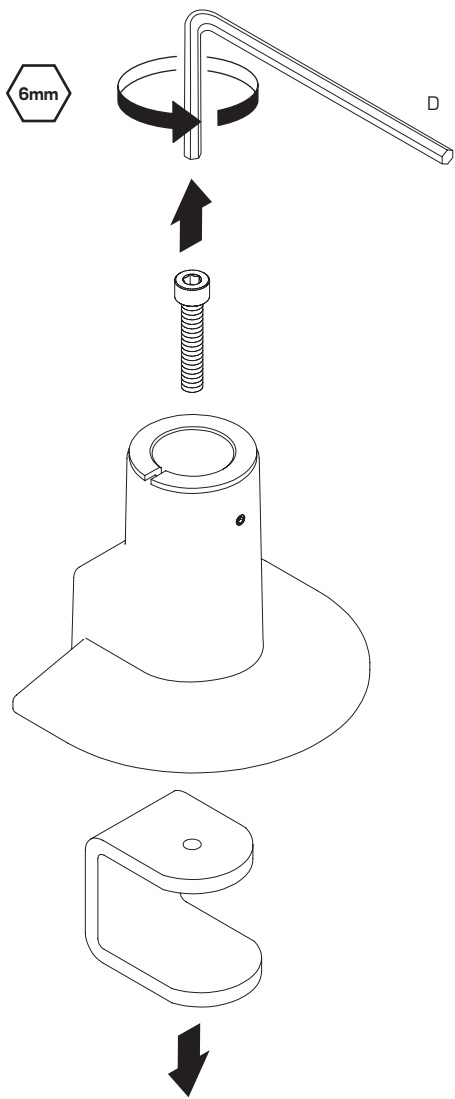 



4

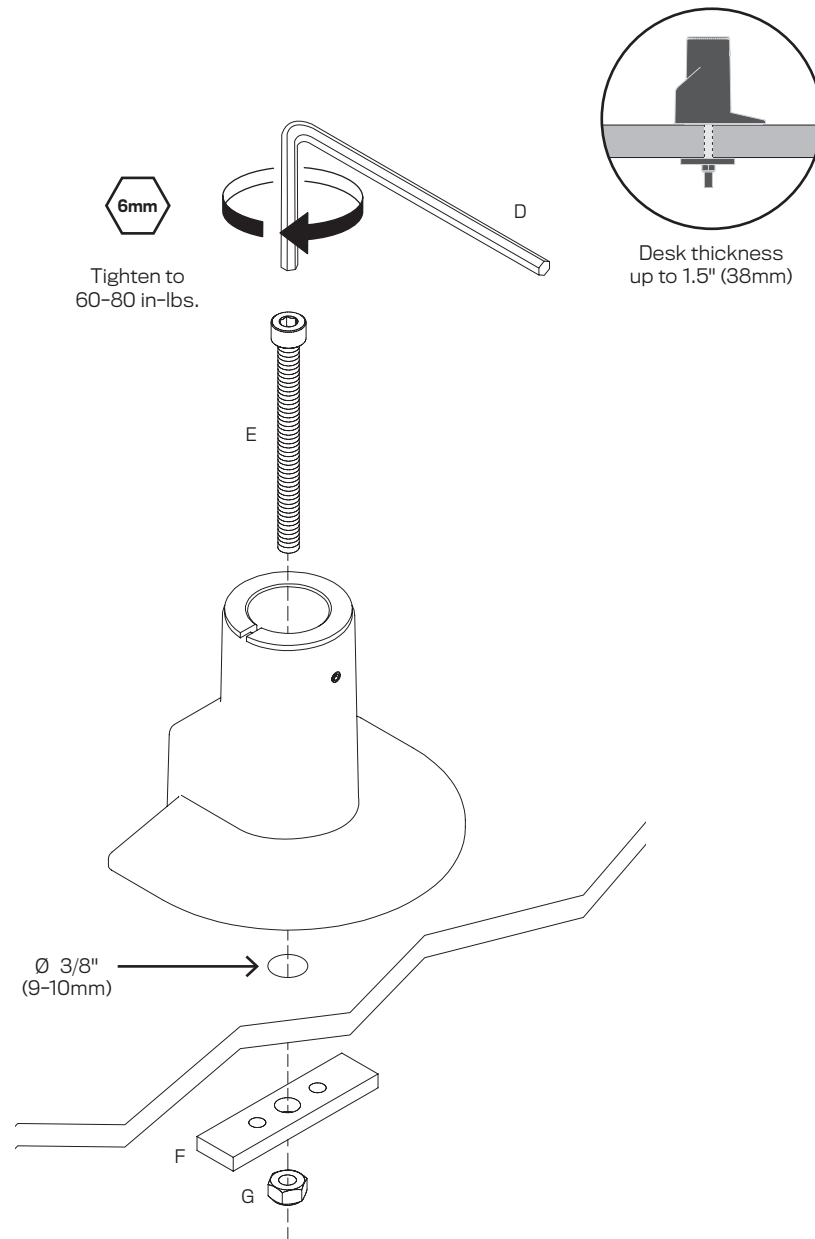 


5

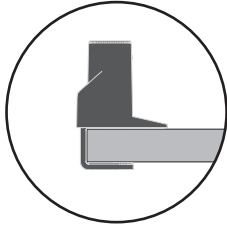 

Desk thickness
up to 1.5" (38mm)

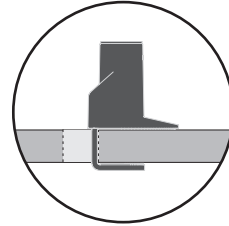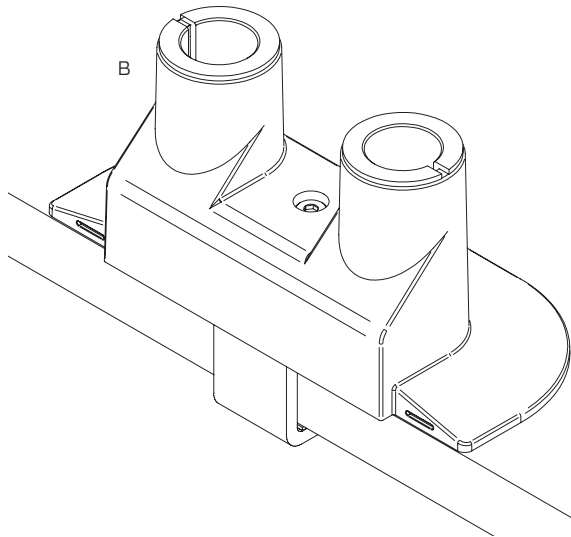  

Desk thickness
up to 1.5" (38mm)

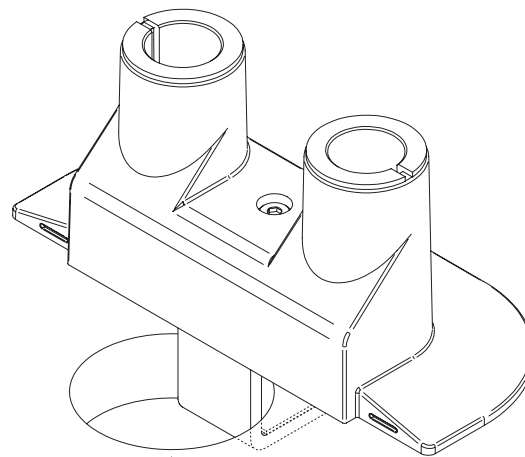 


OR

Ø 2" (51mm)
minimum

6




 Tighten to
60-80 in-lbs.

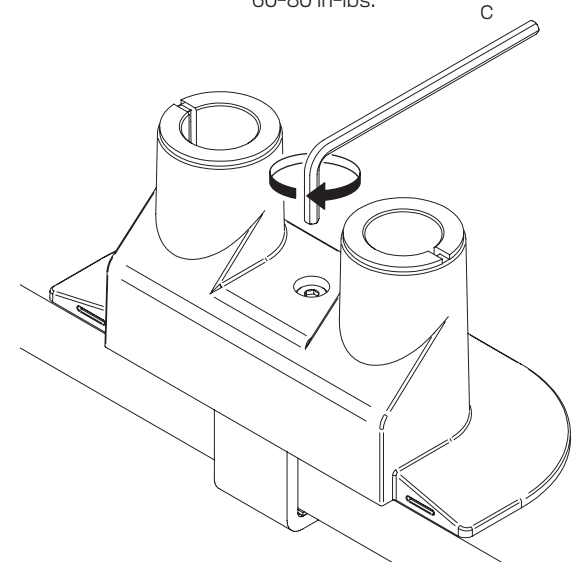


If the monitor arm does not easily fit into the mount, remove the bushing from the mount and place it on the monitor arm and press firmly back into the mount.

 
6a

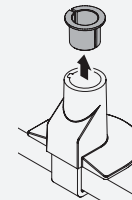


6b

 

6c

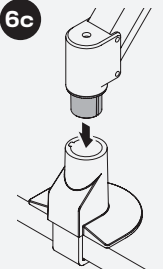 

7

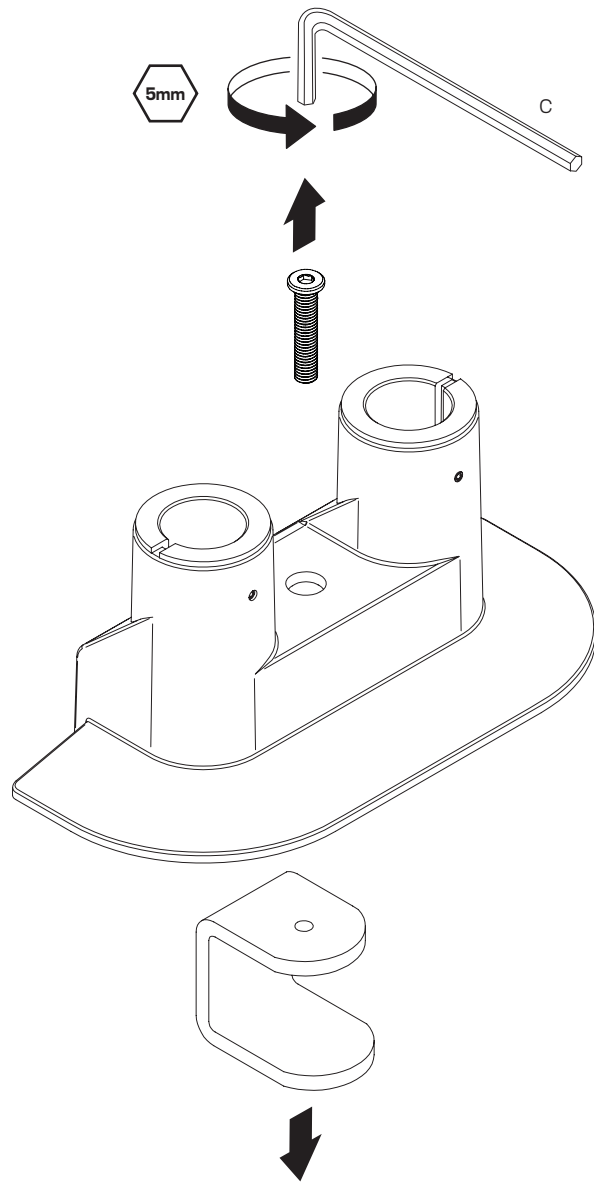 

8

