 
 



 



 








## KS10-B

 
### Installation Instruction

VESA Compatible  
75x75 100x100




PART NO.	DESCRIPTION	QUANTITY	PART NO.	DESCRIPTION	QUANTITY
A	 Center Column	1	F	 Foot Pad	4
B	 Base	1	G	 Dual Lock Fastener	2
C	 Connecting Plate	1	H	 Protective Pad	2
D	 VESA Plate	1	I	 Key	2
E	 Storage Shelf	1	J	 Cable Clip	1
			K	 4mm Allen Key	1
			L	 M6x16	8
			M	 M4x10	5
			N	 M4x8	4
			O	 M5x6	2

**IMPORTANT:** Install all M6 screws finger tight. Once all are installed, go back through and retighten all screws

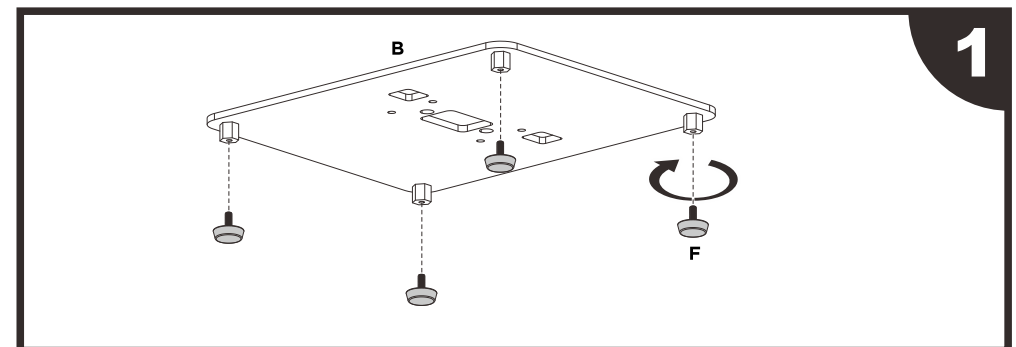


2

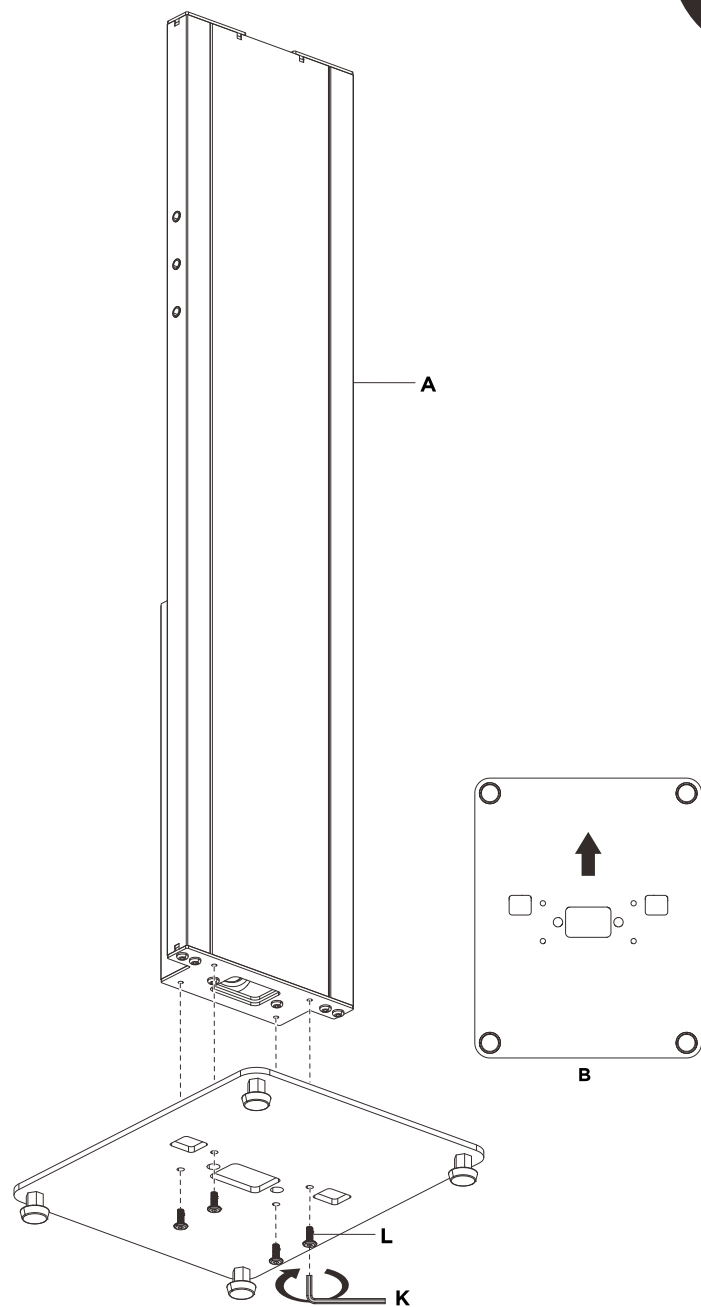 

1

 
3

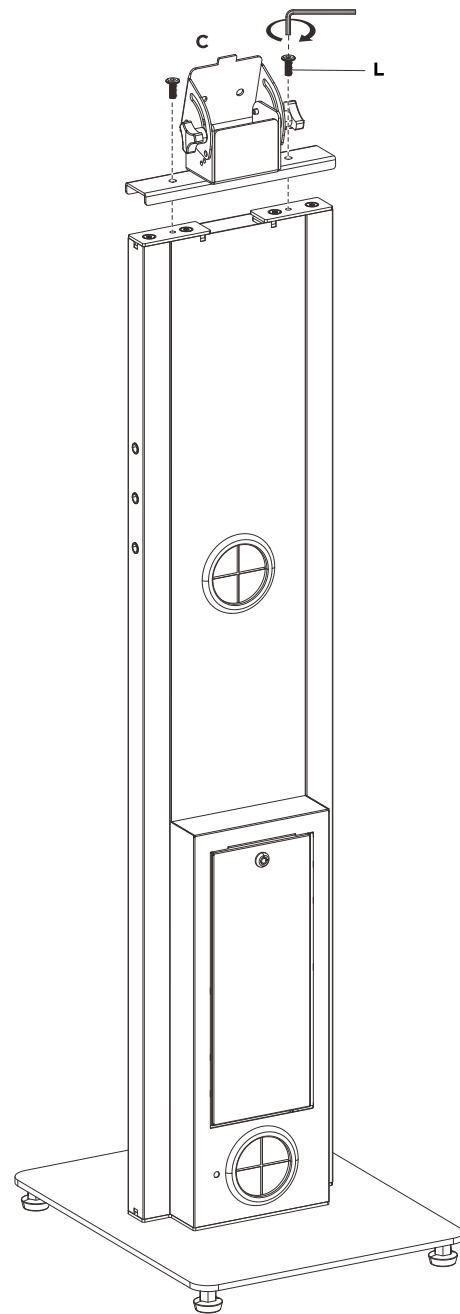


2



 4

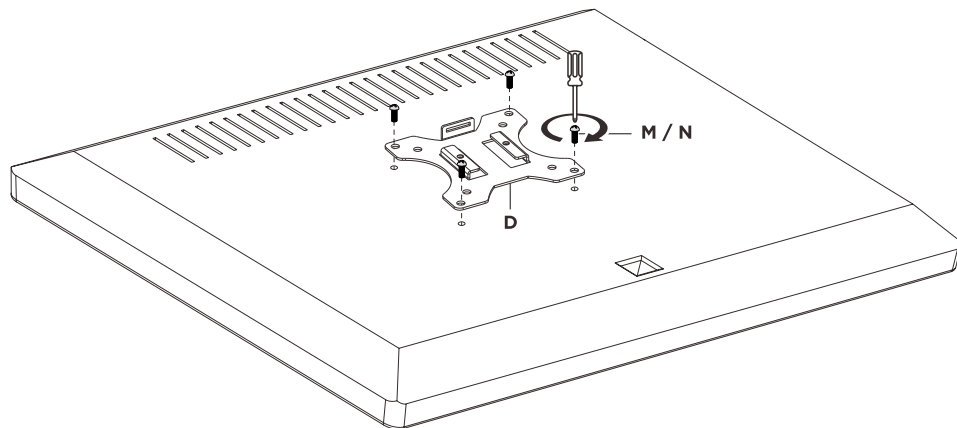


5

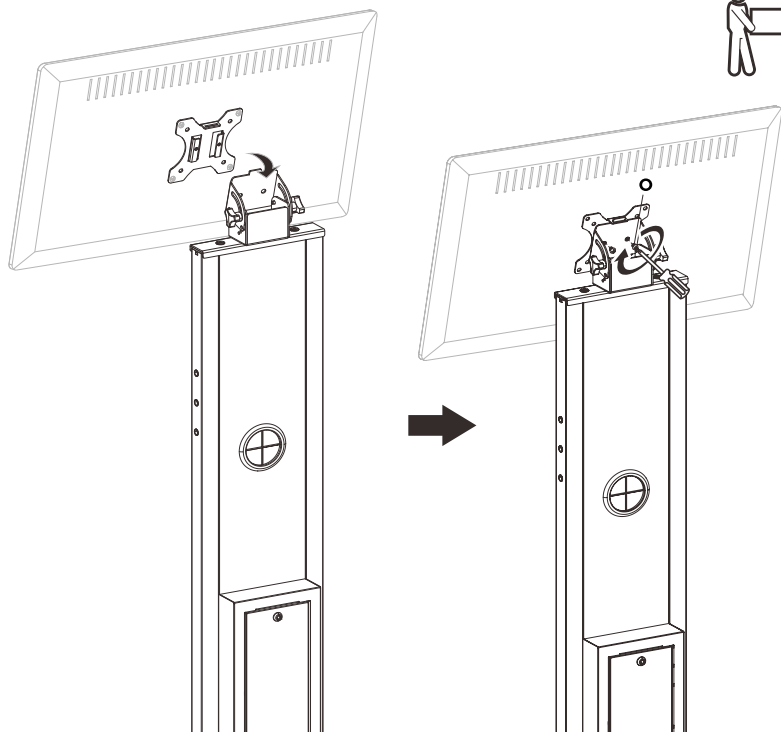 


3

 6


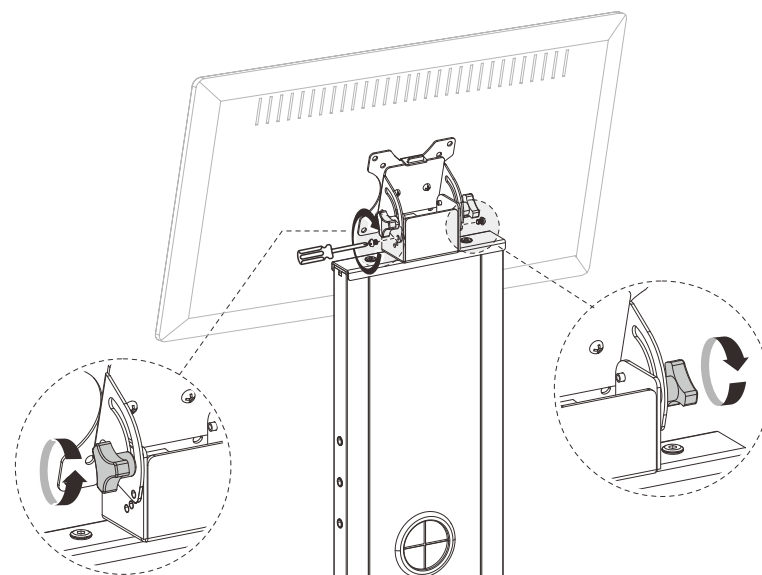


The screen can be fixed at angles of 15°, 25°, 35°, or 45° by tightening the screws in one pair of the screw holes.


 
Remove the screws using a Phillips screwdriver as shown, then you can adjust the thumb knob to freely tilt the screen from 15° to 90°.

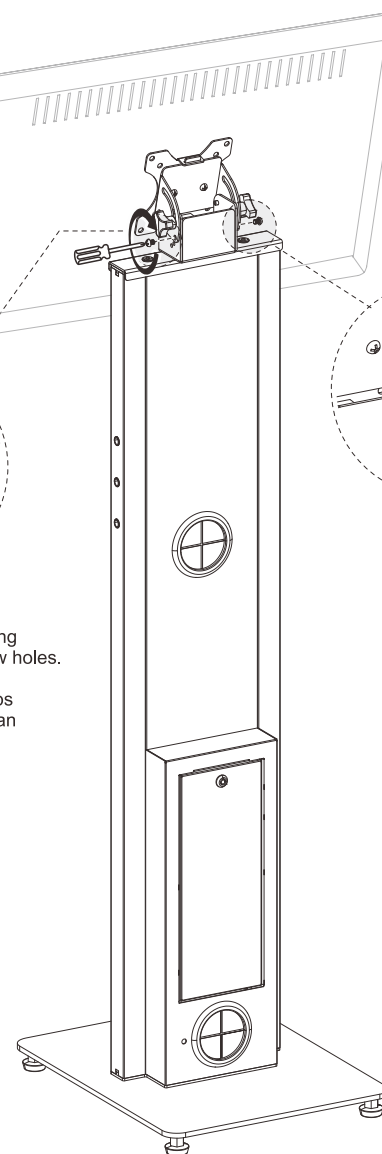

4

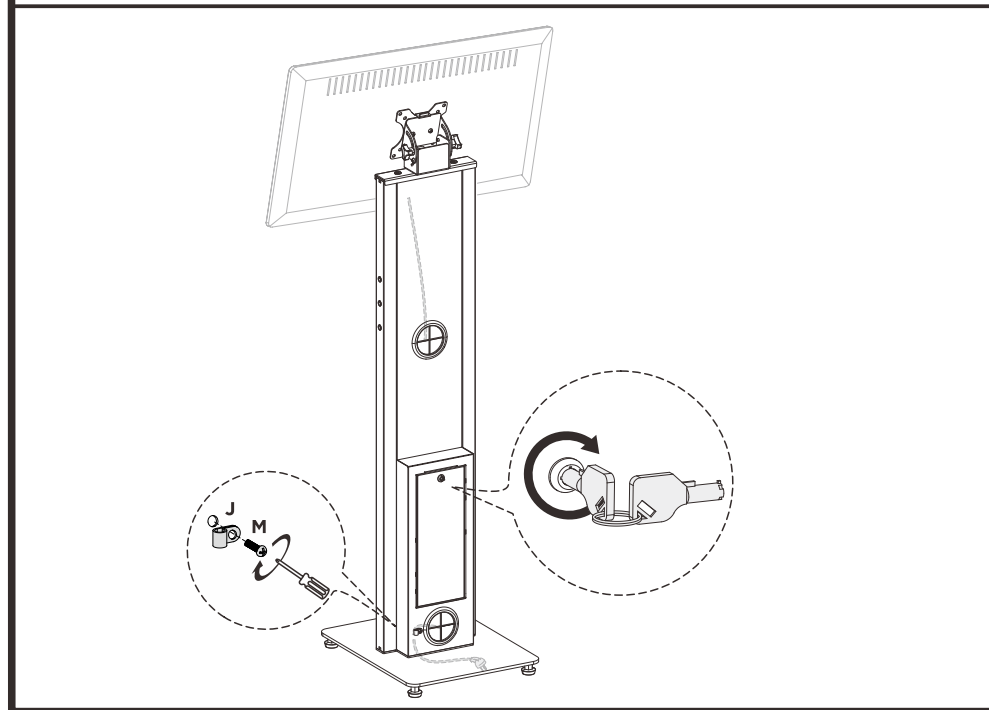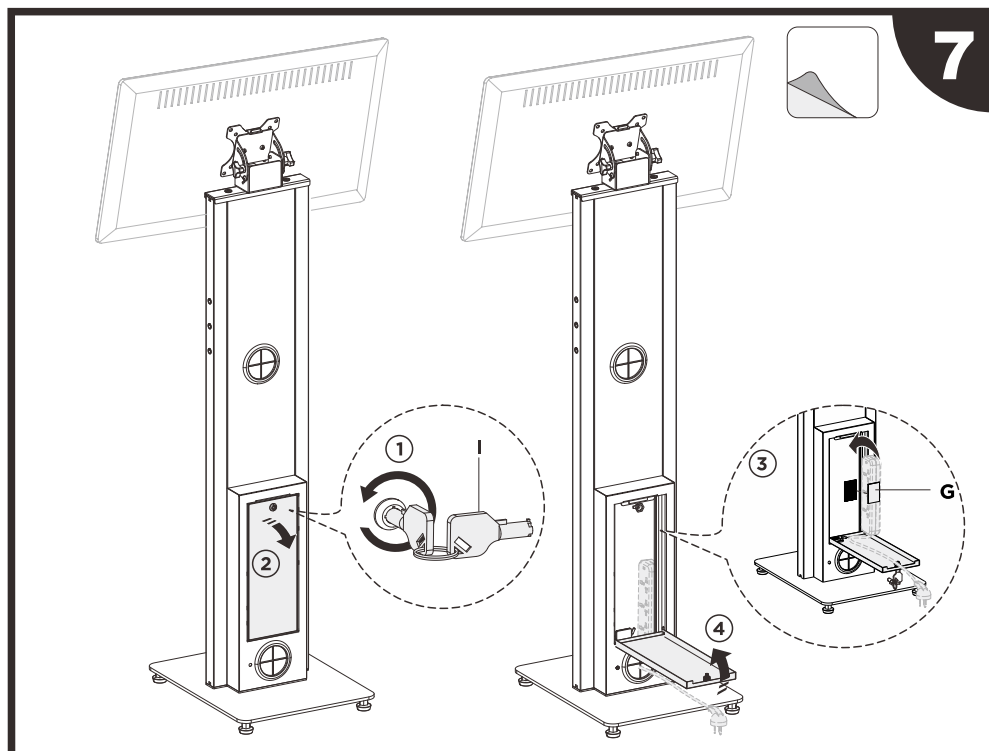  

5

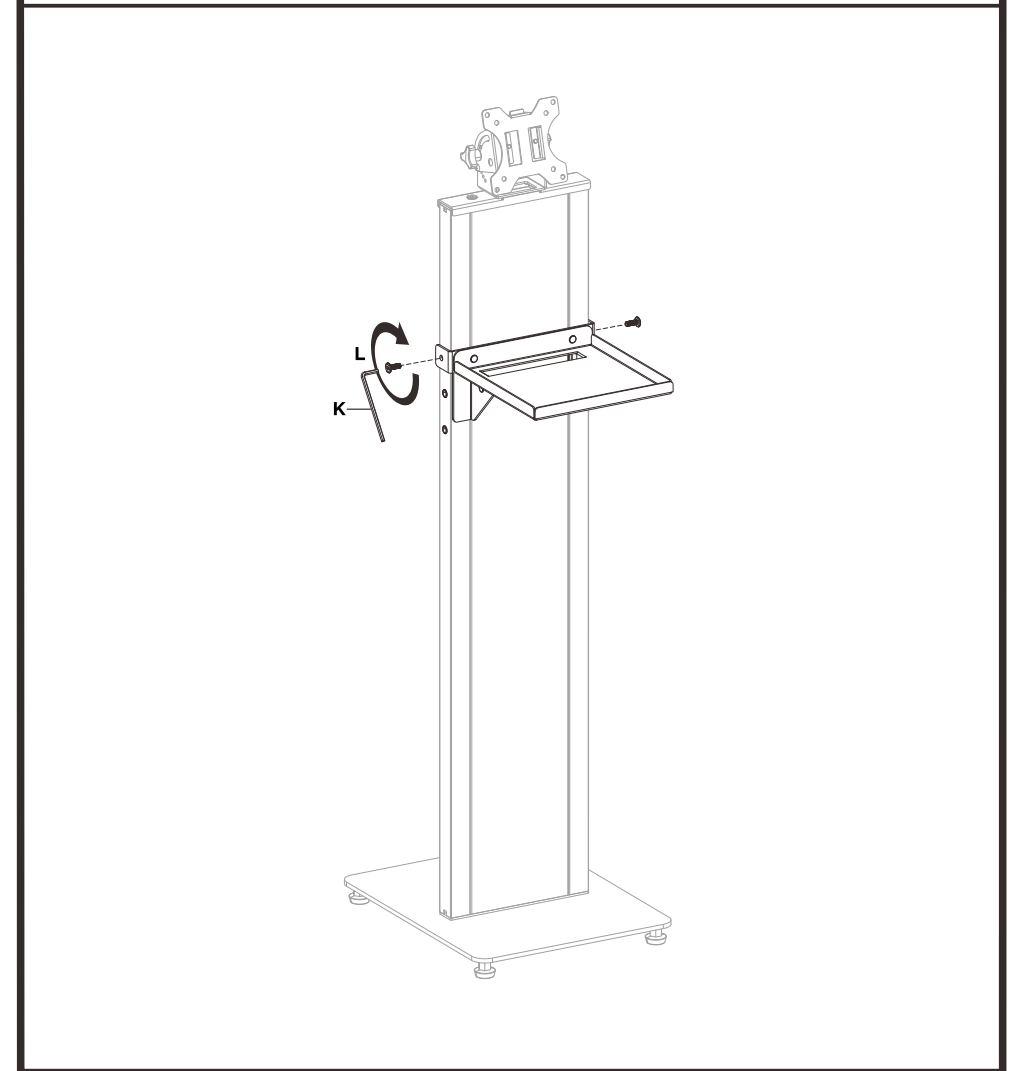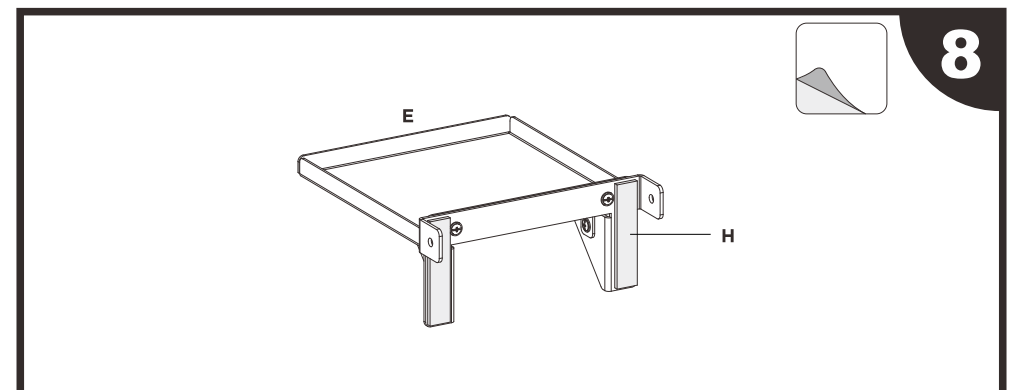  

6