



WINSTON WORKSTATION®

Installation Instructions

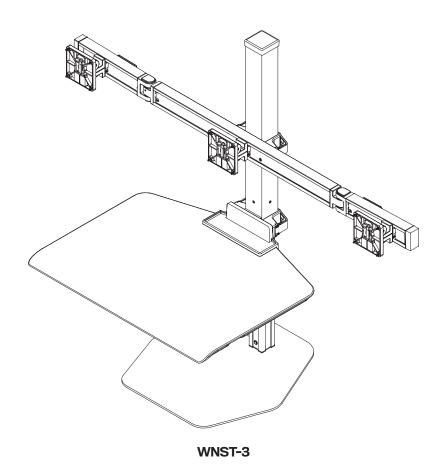

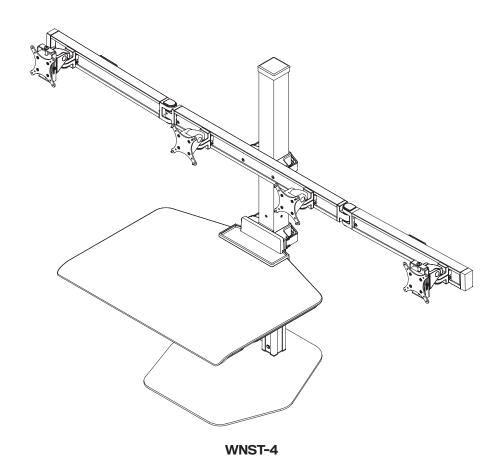


Human Active Technology

800 524 2744 customerservice@team-hat.com team-hat.com



CAUTION:


Mechanism can rise quickly with no equipment in place. User equipment must be properly installed, prior to height adjustment. Failure to do so may result in personal injury and/or property damage.

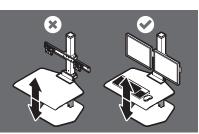

NOTE:

Depending on your Winston Workstation* configuration, you may not receive all the parts shown within this instruction booklet.

Installation may require two people.

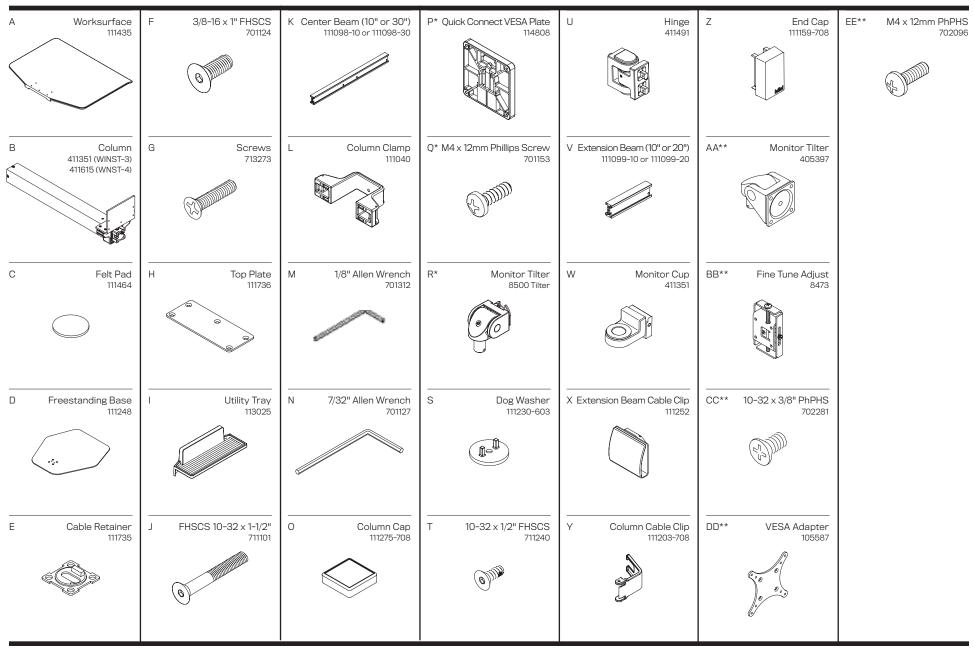






IMPORTANT: Do not pull excessively on cable – doing so may result in accidental actuation of column.




CAUTION: Do not press height adjust button until unit is fully assembled.

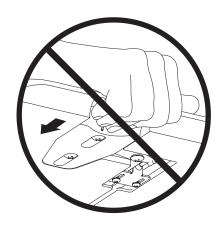

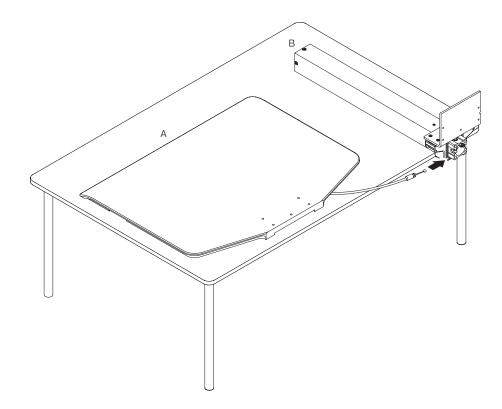


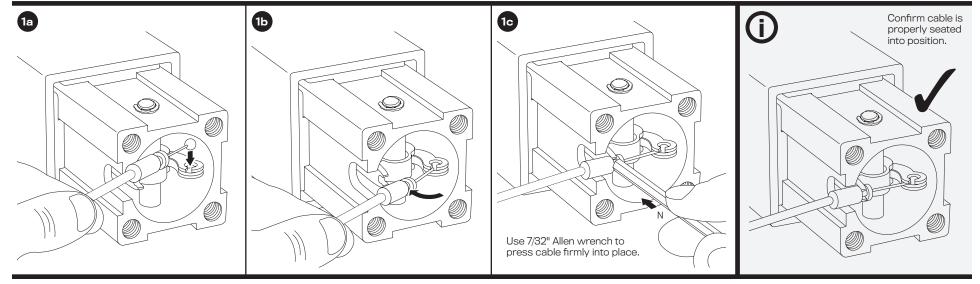


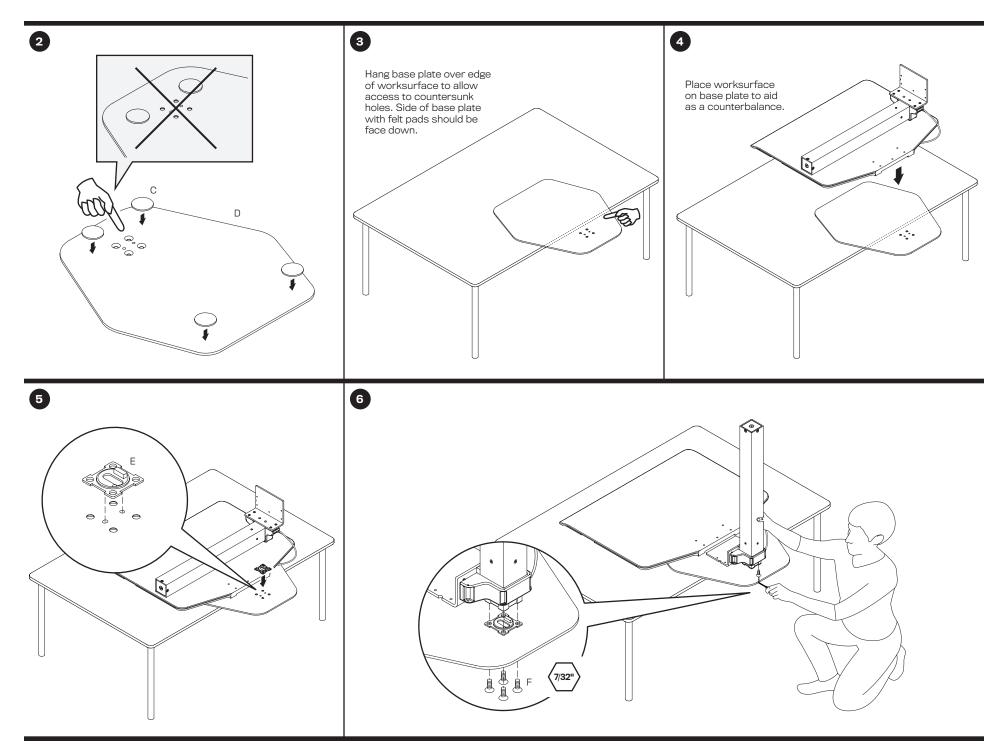







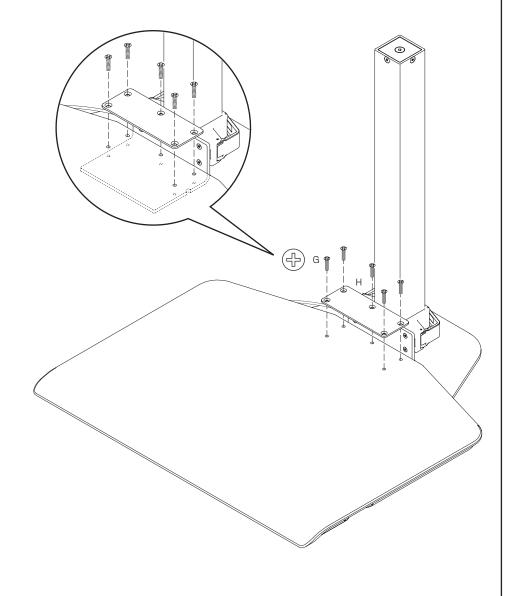

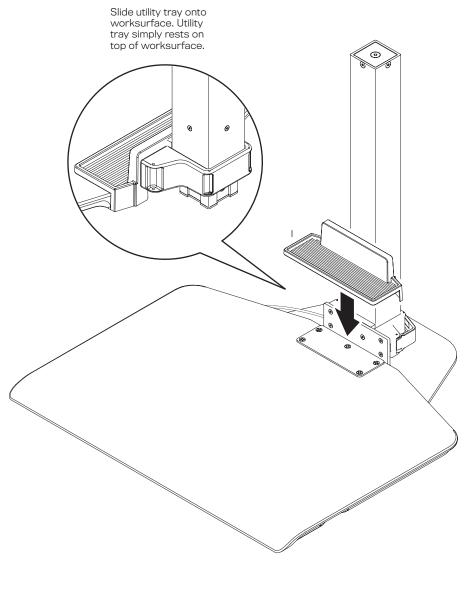


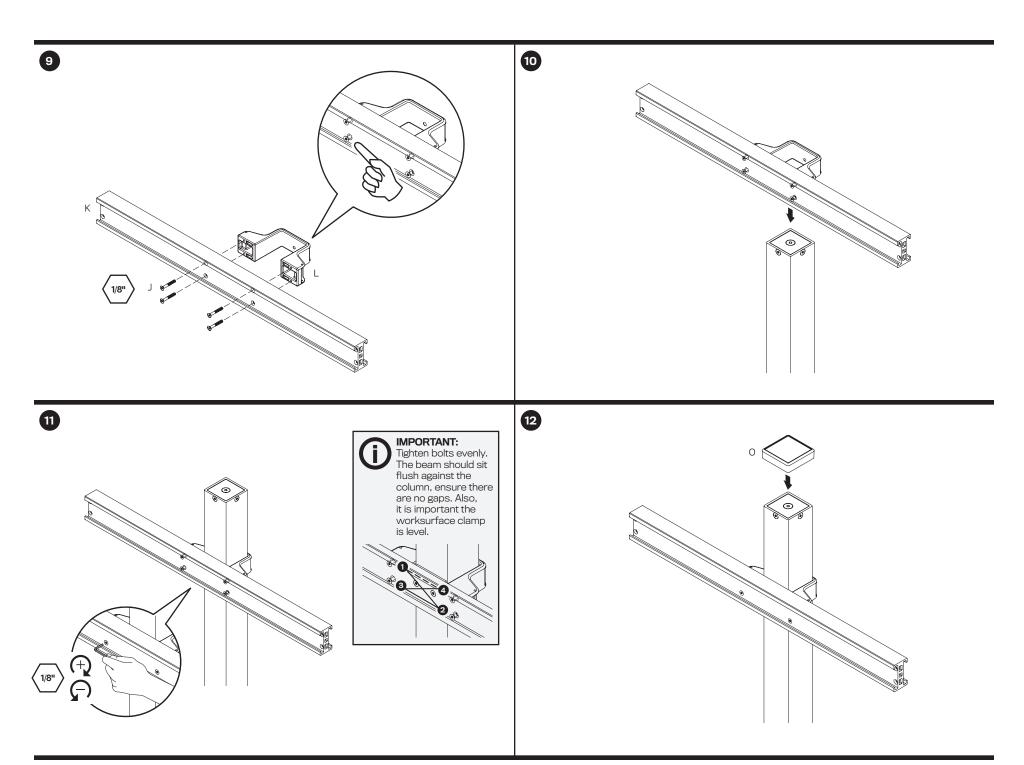

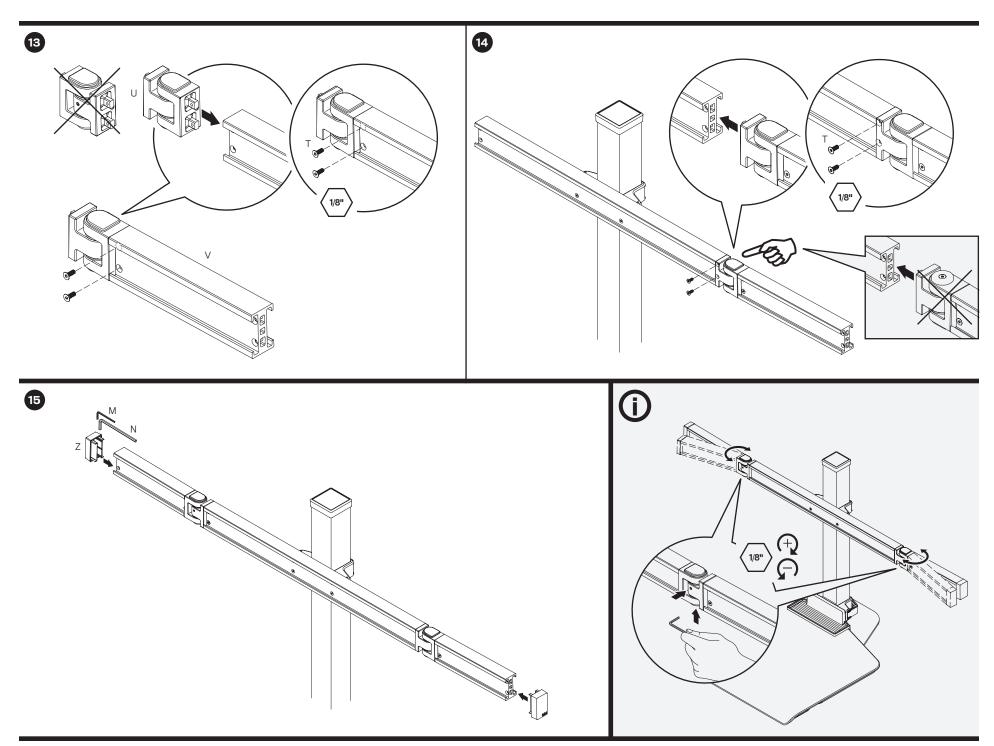


PAGE 7 OF 14




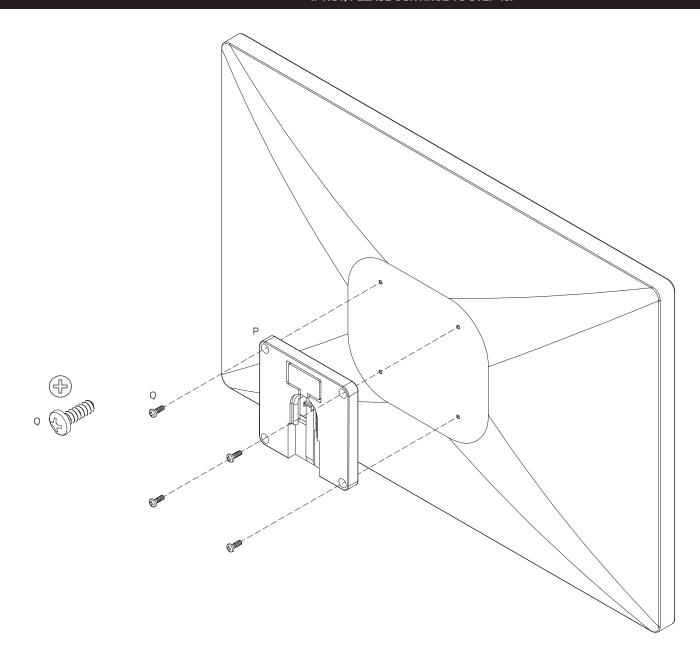




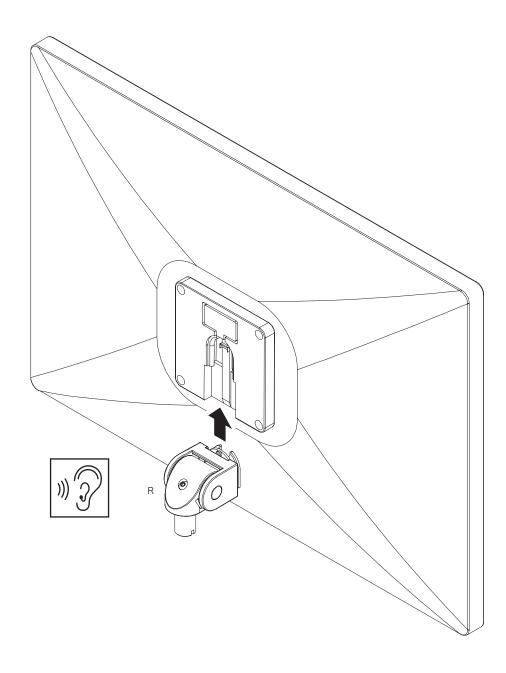




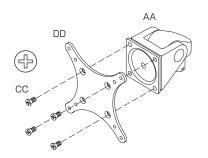





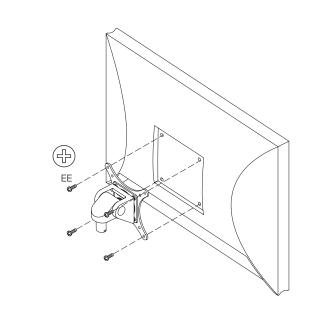


FINE TUNE HEIGHT ADJUST TILTER

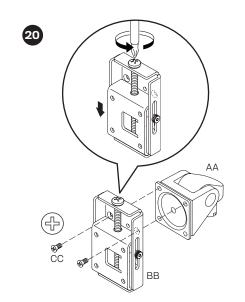


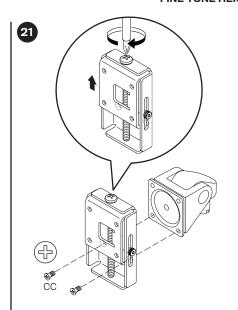

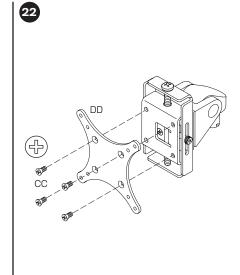


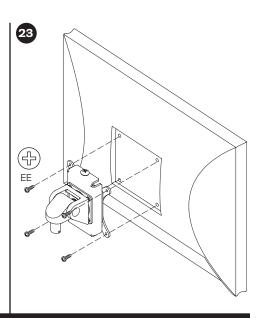





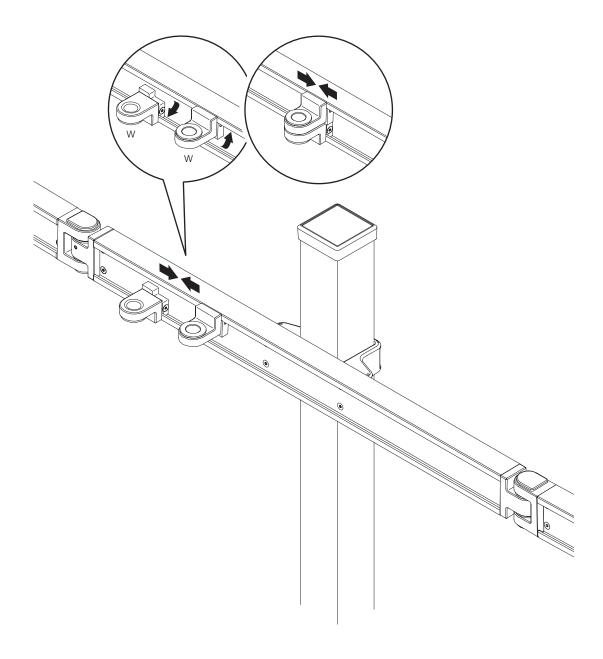




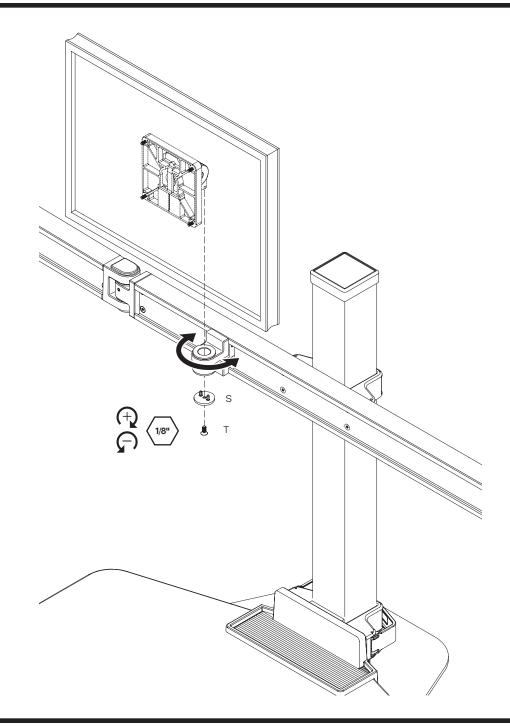

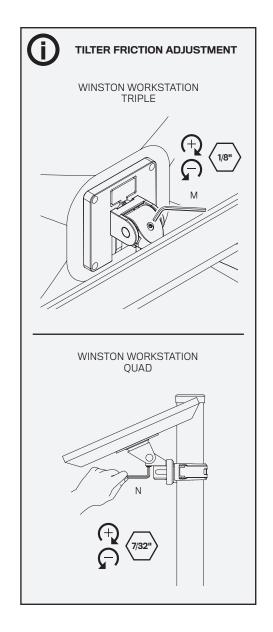

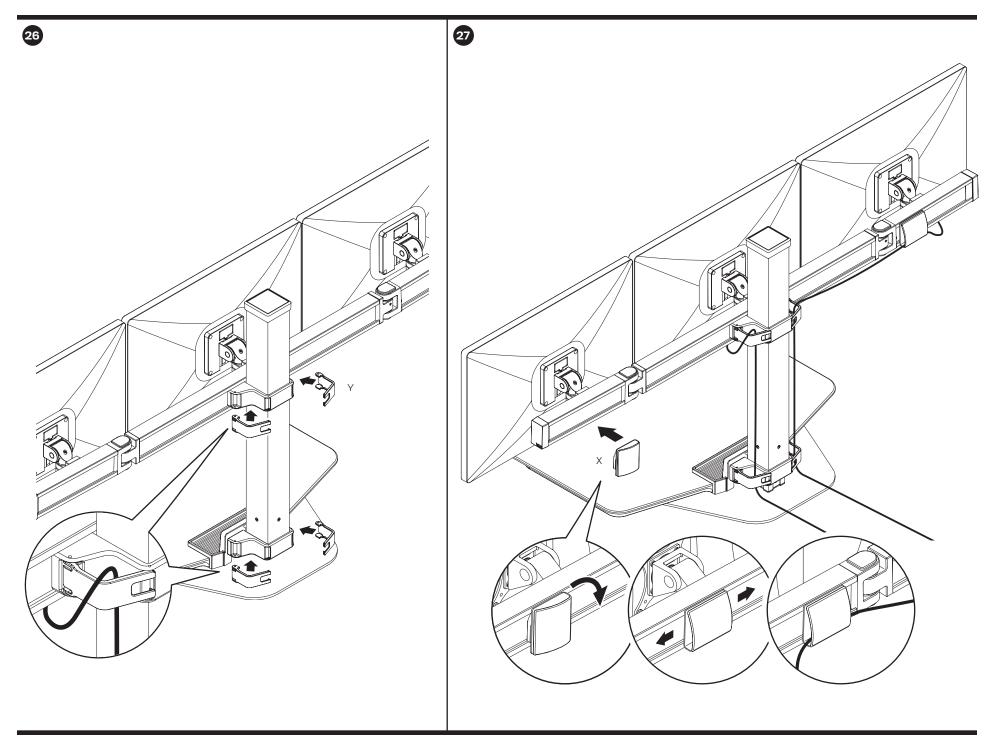



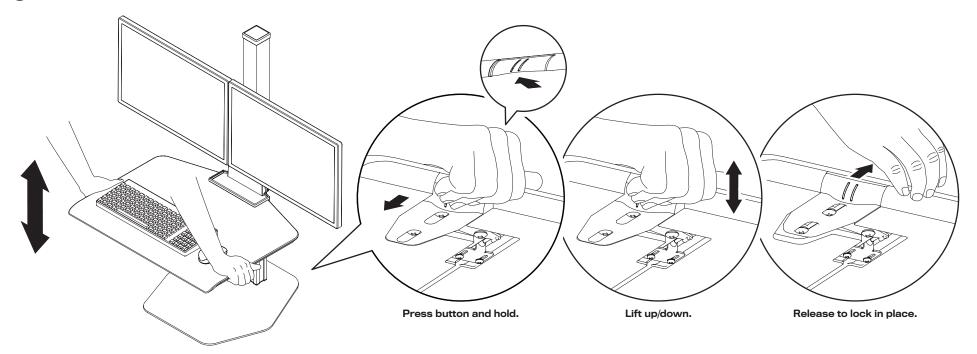



IS YOUR HEIGHT ADJUST BUTTON NOT WORKING? If so, make the adjustments below.

- 17a Slide workstation so that the worksurface hangs over desk edge to allow access to underneath the worksurface.
- Loosen the two screws as shown.
- Slide bracket in the direction shown and tighten screws.
- Test height adjust button readjust by repeating the steps above as necessary.

