


POCKET TEARDROP BRACKET KIT


Installation Instructions

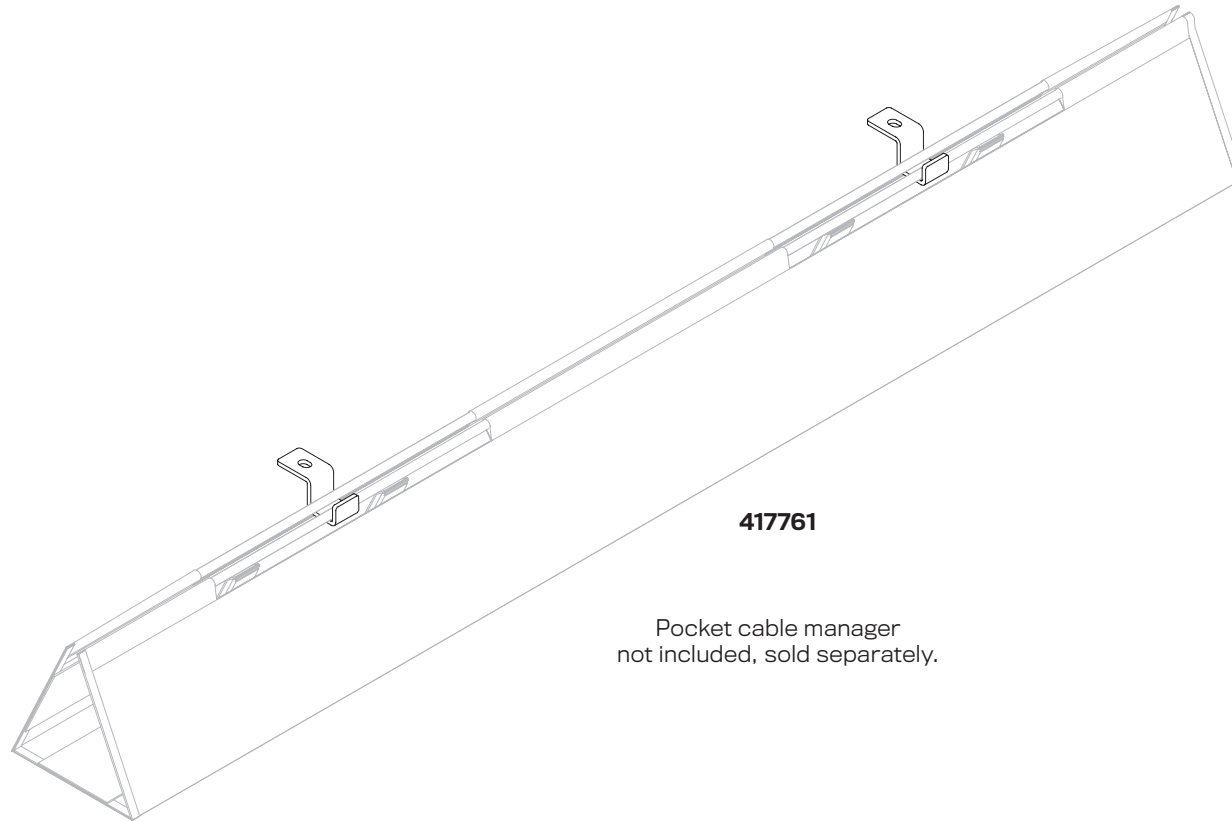


417761


Pocket cable manager
not included, sold separately.


1

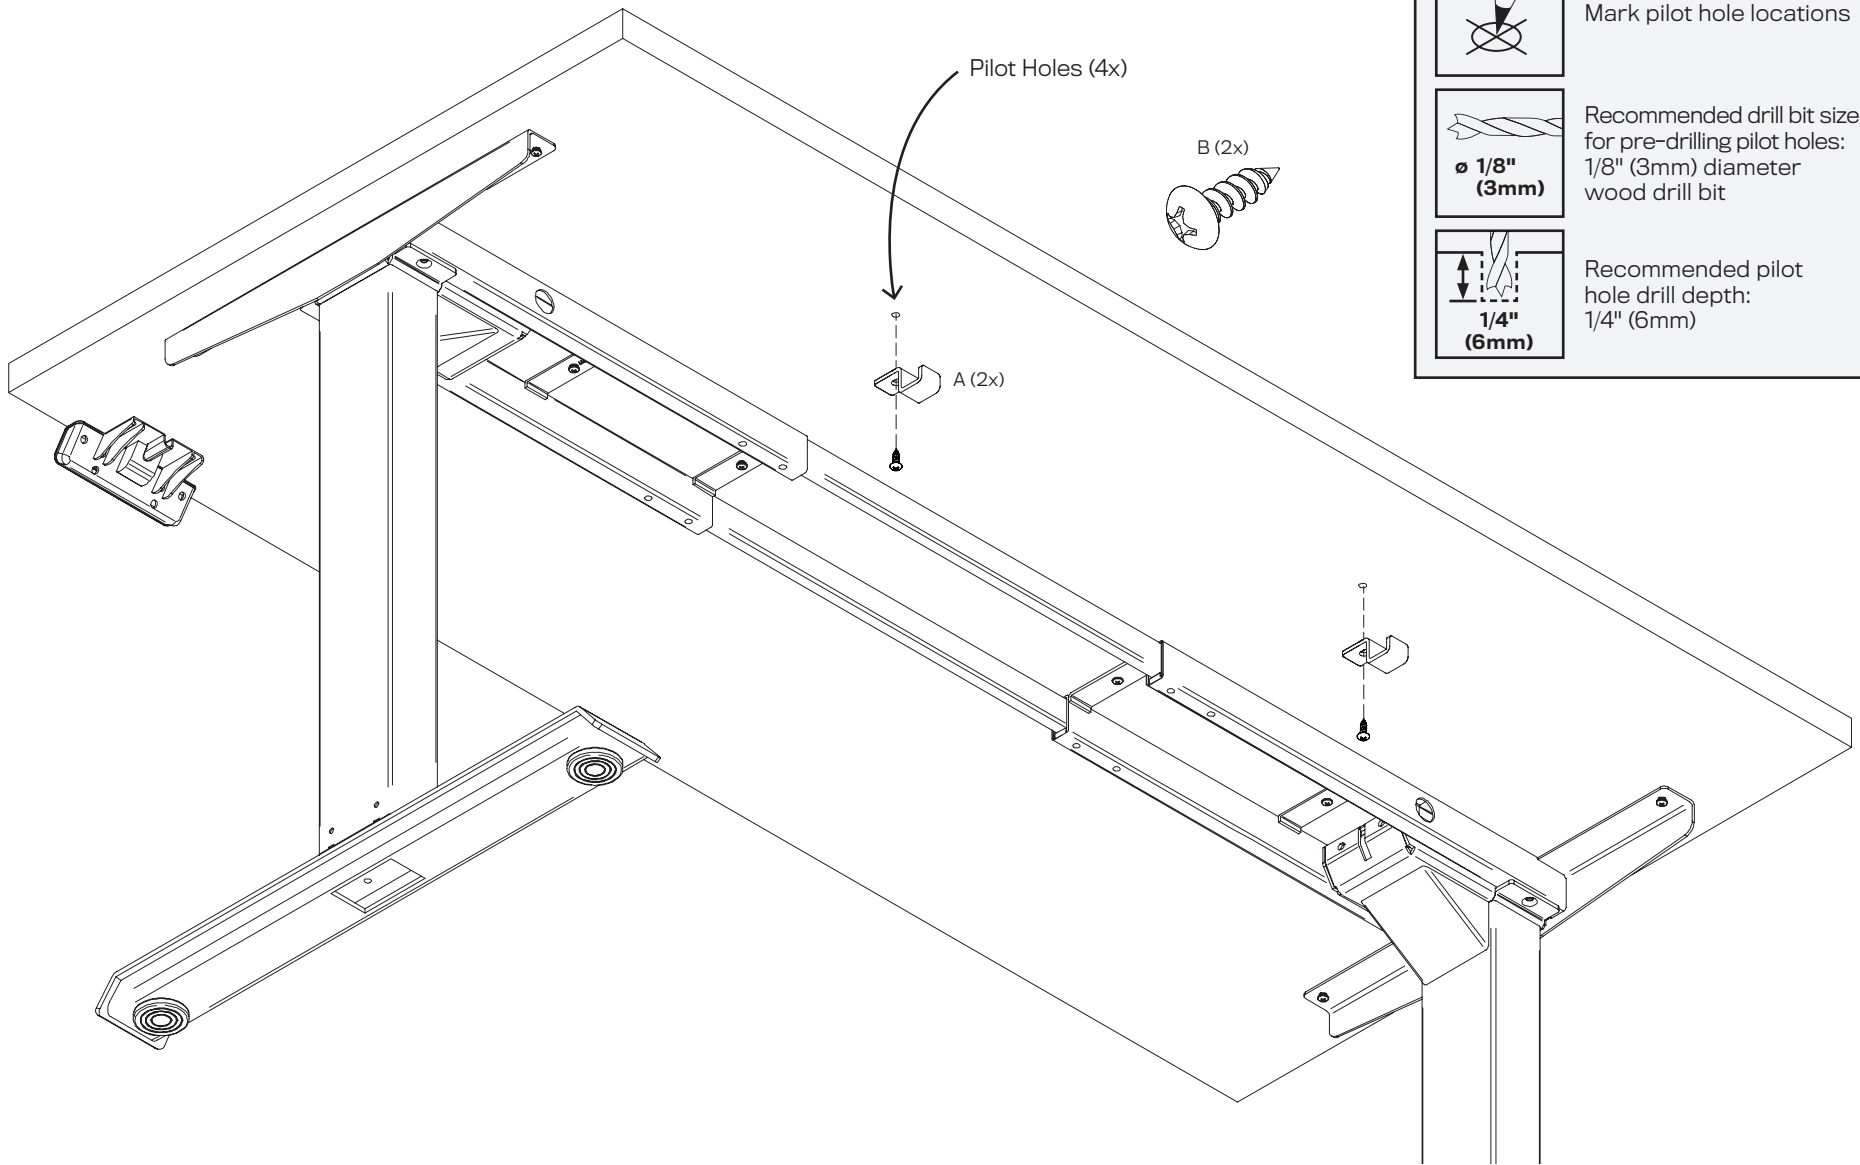


i **PILOT HOLES**

 Mark pilot hole locations

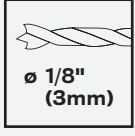 Recommended drill bit size for pre-drilling pilot holes:
1/8" (3mm) diameter wood drill bit

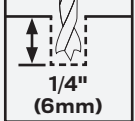 Recommended pilot hole drill depth:
1/4" (6mm)

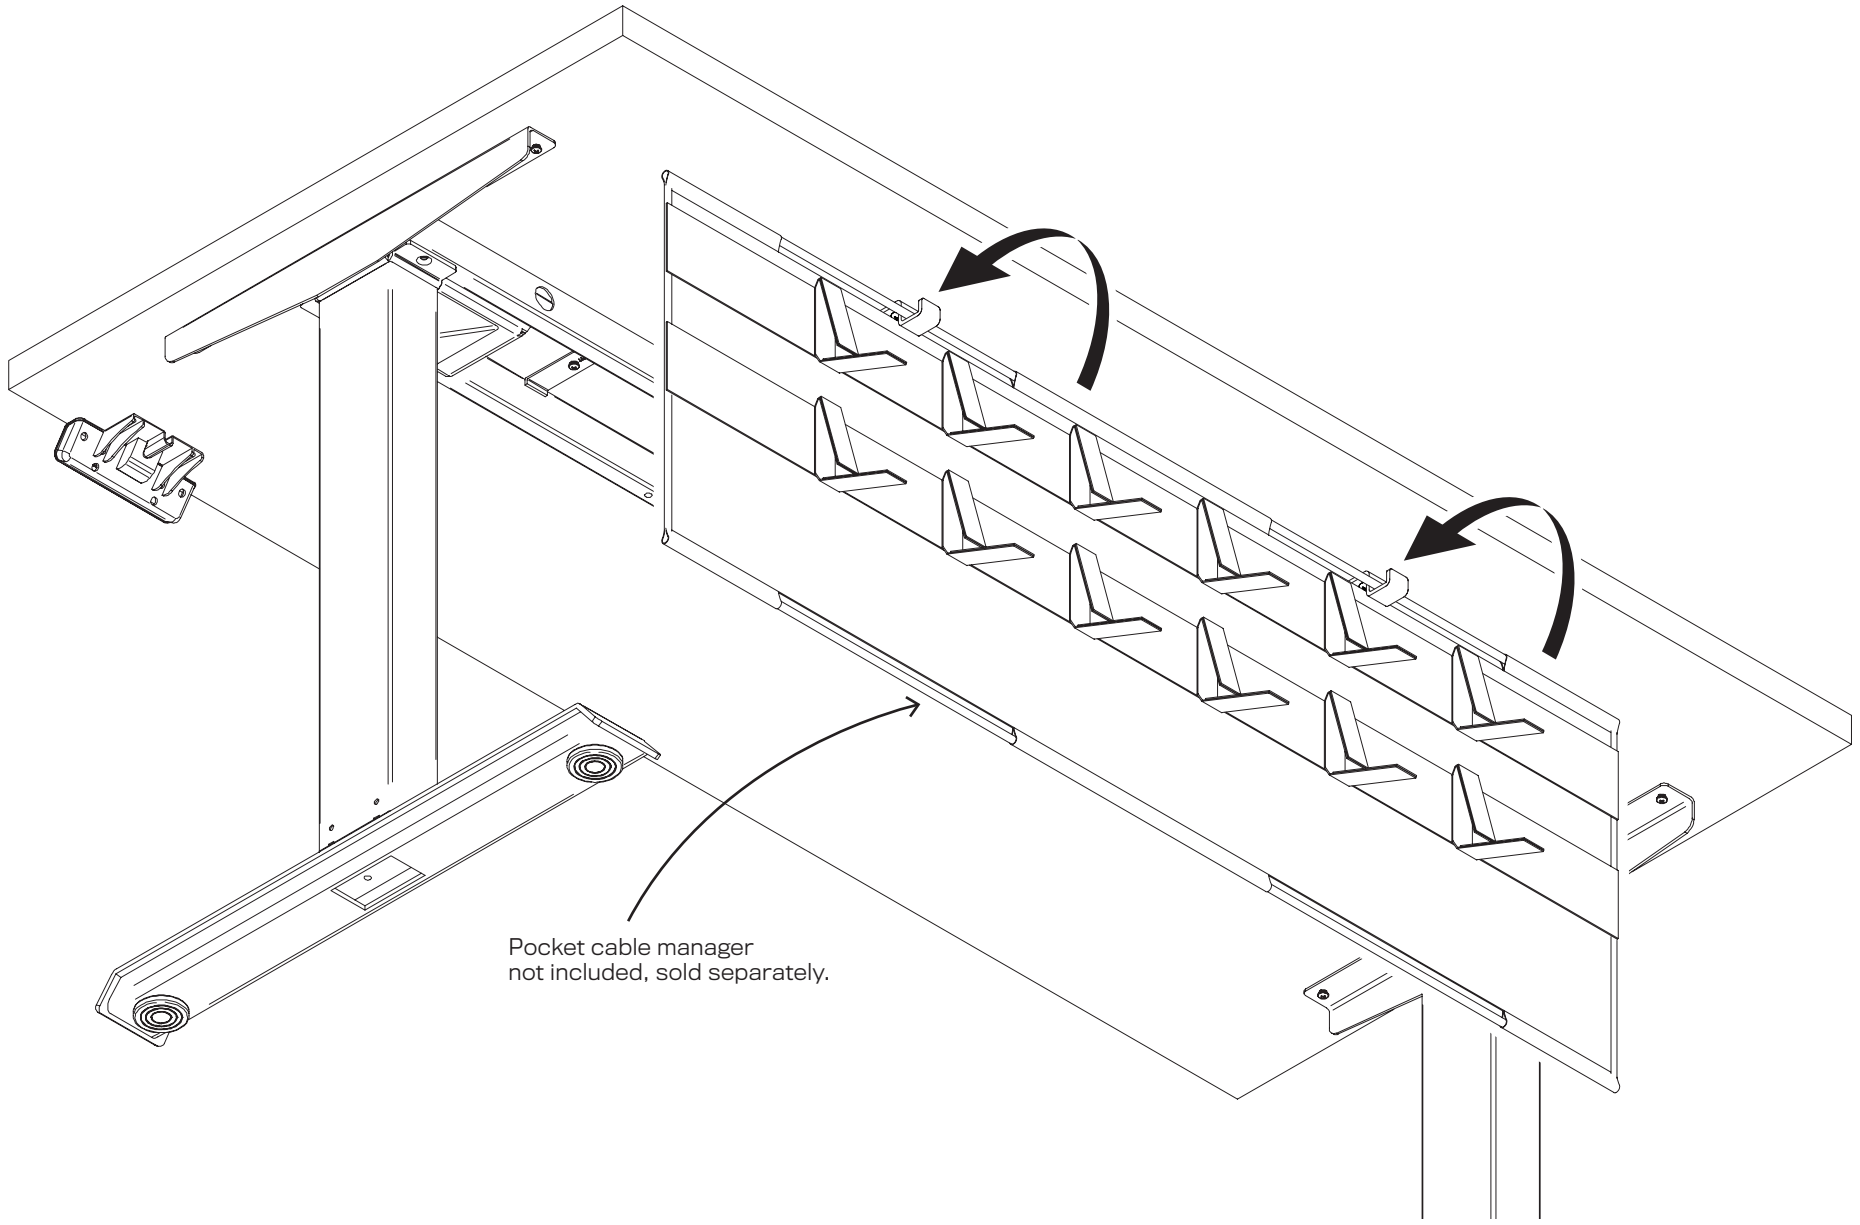

Pocket cable manager
not included, sold separately.

