




MNTRXX-WM-08 Installation Instructions

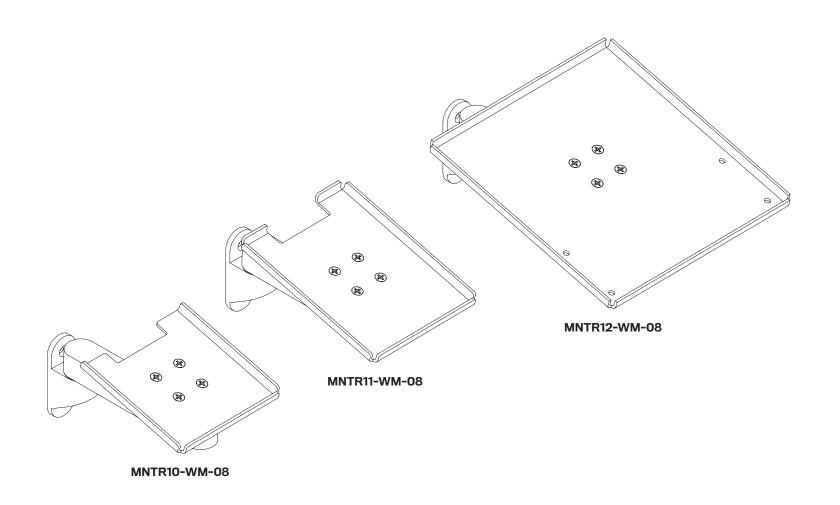

Human Active Technology 800 524 2744 customerservice@team-hat.com team-hat.com

PARTS LIST

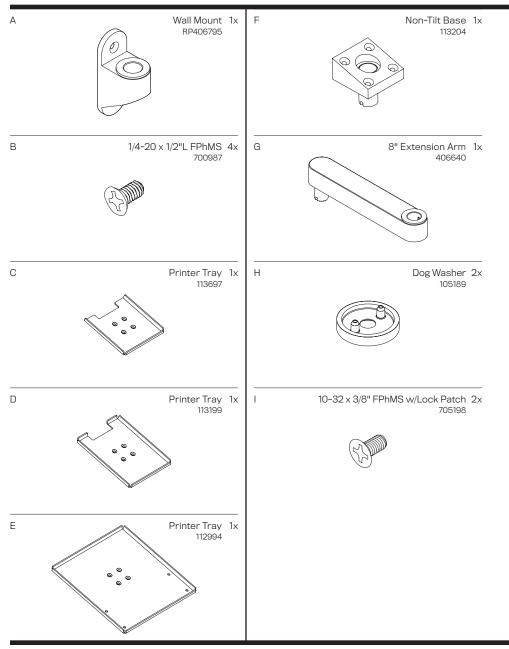

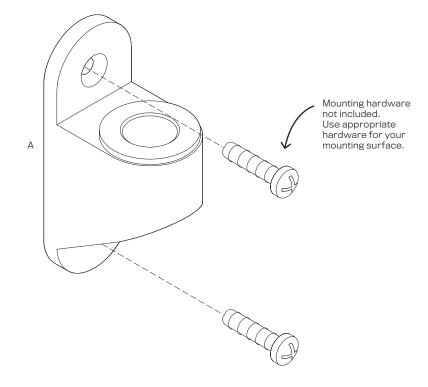

1


\bigcirc


2

NOTE:

The Dog Washer (H) & 10-32 x 3/8" FPhMS Screw w/Lock Patch (I) MUST be screwed in tightly to secure the extension arms together and add sufficient swivel tension.

The 'Ears' on the Dog Washer (H) must line up with the notches in the bottom of the mount block when installed.

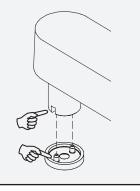

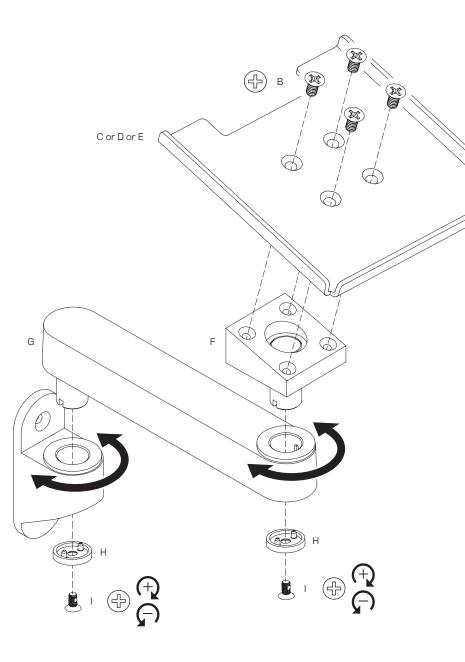

(j)

NOTE:

The Dog Washer (H) & 10–32 x 3/8" FPhMS Screw w/Lock Patch (I) MUST be screwed in tightly to secure the extension arms together and add sufficient swivel tension.

The 'Ears' on the Dog Washer (H) must line up with the notches in the bottom of the mount block when installed.

