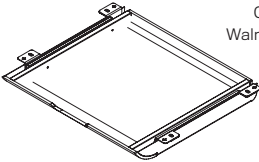





DR-SM-X-XX

PARTS LIST

<div data-bbox="96 244 112 276">A</div> <div data-bbox="134 276 392 438"></div> <div data-bbox="358 244 600 323"><div data-bbox="358 244 537 276">Drawer Assembly</div><div data-bbox="358 276 537 308">Oak = DR-SM-x-WO</div><div data-bbox="358 308 537 323">Walnut = DR-SM-x-WW</div><div data-bbox="548 244 600 276">1x</div></div>			
<div data-bbox="96 491 112 523">B</div> <div data-bbox="134 566 313 678"></div> <div data-bbox="302 491 600 595"><div data-bbox="302 491 537 523">Fiello Drawer Cover - Left</div><div data-bbox="380 523 537 547">Black = R07054210</div><div data-bbox="380 547 537 571">White = R07054204</div><div data-bbox="380 571 537 595">Silver = R07054230</div><div data-bbox="548 491 600 523">1x</div></div>			
<div data-bbox="96 738 112 770">C</div> <div data-bbox="134 829 313 941"></div> <div data-bbox="313 738 600 850"><div data-bbox="313 738 537 770">Fiello Door Cover - Right</div><div data-bbox="380 770 537 794">Black = R07054110</div><div data-bbox="380 794 537 818">White = R07054104</div><div data-bbox="380 818 537 842">Silver = R07054130</div><div data-bbox="548 738 600 770">1x</div></div>			
<div data-bbox="96 986 112 1018">D</div> <div data-bbox="134 1061 246 1157"></div> <div data-bbox="235 986 600 1050"><div data-bbox="235 986 537 1018">5 x 20mm Flat Head Wood Screw</div><div data-bbox="459 1018 537 1050">R011530</div><div data-bbox="548 986 600 1018">4x</div></div>			

1 INSTALL DRAWER

Place the left and right drawer covers (B & C) over the sides of the drawer assembly as shown and set on the desktop to align.

Attach the Drawer to the underside of the worksurface using the 5 x 20mm Screws (D) 4x.

Note: Mount the front of the drawer 1" from the front edge of the worksurface.

One side of drawer should be flush with the inside face of the Frame Side Bar.

