
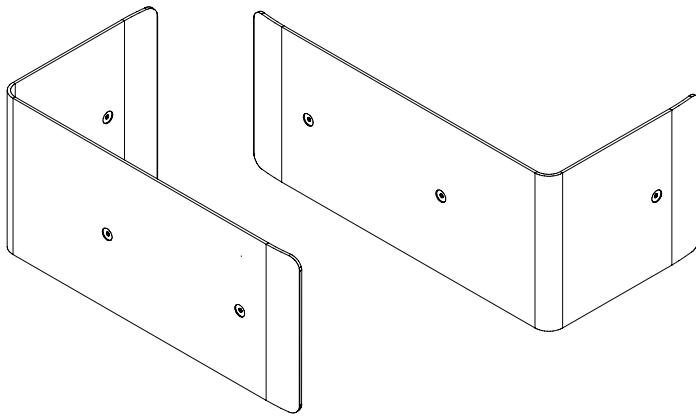


FIELD MODESTY/PRIVACY SCREEN

Installation Instructions










MP-RP-X-XX

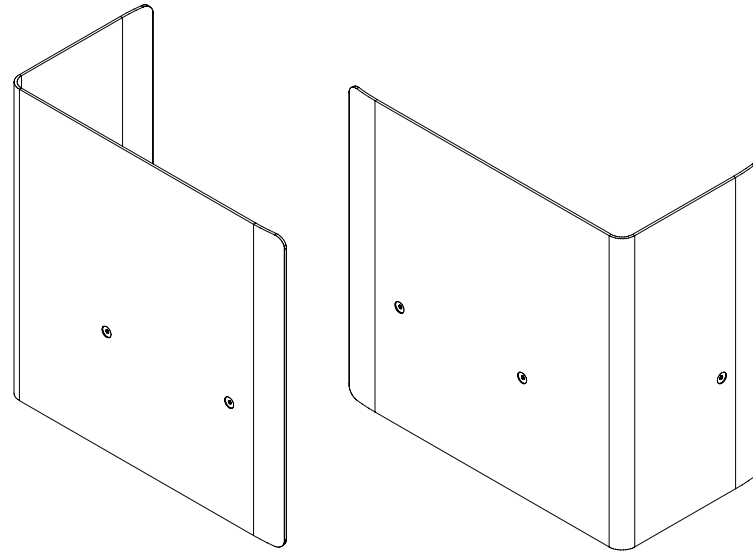

MP-FP-X-XX

PARTS LIST
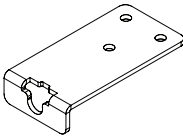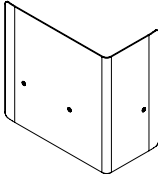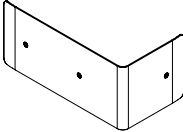
<div><div>A</div><div></div><div><div>Oak = 70210 Walnut = 70230</div><div>Not included with MP-RP-X-XX</div></div></div>	<div><div>F</div><div></div><div><div>Screen Bracket 6X</div><div>Black = R07060610 White = R07060604 Silver = R07060630</div></div></div>
<div><div>B</div><div></div><div><div>Full Screen - LH Privacy/RH Modesty 1X</div><div>Oak = 70220 Walnut = 70240</div><div>Not included with MP-RP-X-XX</div></div></div>	<div><div>G</div><div></div><div><div>5 x 20mm Flat Head Wood Screw 18X</div><div>R011530</div></div></div>
<div><div>C</div><div></div><div><div>Ribbon Screen - LH Privacy/RH Modesty 2X</div><div>Oak = 70190 Walnut = 70200</div><div>Not included with MP-FP-X-XX</div></div></div>	
<div><div>D</div><div></div><div><div>Screen Adapter 6X</div><div>R070633</div></div></div>	
<div><div>E</div><div></div><div><div>Screen Bolt 6X</div><div>Black = R07060710 White = R07060704 Silver = R07060730</div></div></div>	

1 INSTALL SCREEN ADAPTERS

Insert the Screen Bolts (Part E) through the mounting points of the Modesty/Privacy Screen (models vary).

Thread the Screen Adapters (Part D) onto the Screen Bolts (Part E).


Note: MP-FP-x-xx screens have a modesty and privacy orientation. You can flip the screen from the right to left to change from modesty to privacy.

MP-RP-x-xx screens only have one orientation.




MP-FP-x-xx screens have a modesty and privacy orientation. You can flip the screen from the right to left to change from modesty to privacy.

MP-FP-x-xx

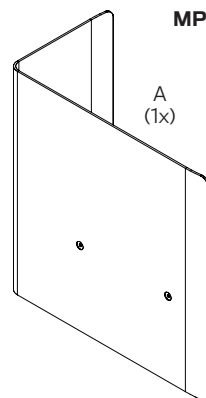


Right-hand Privacy /
Left-hand Modesty

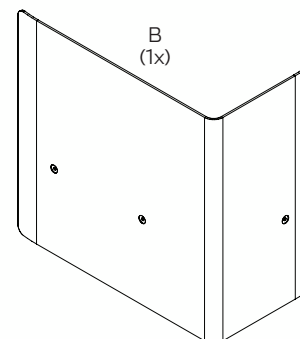


Left-hand Privacy /
Right-hand Modesty

MP-RP-x-xx

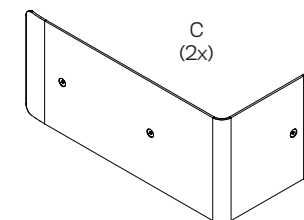


Only one orientation.

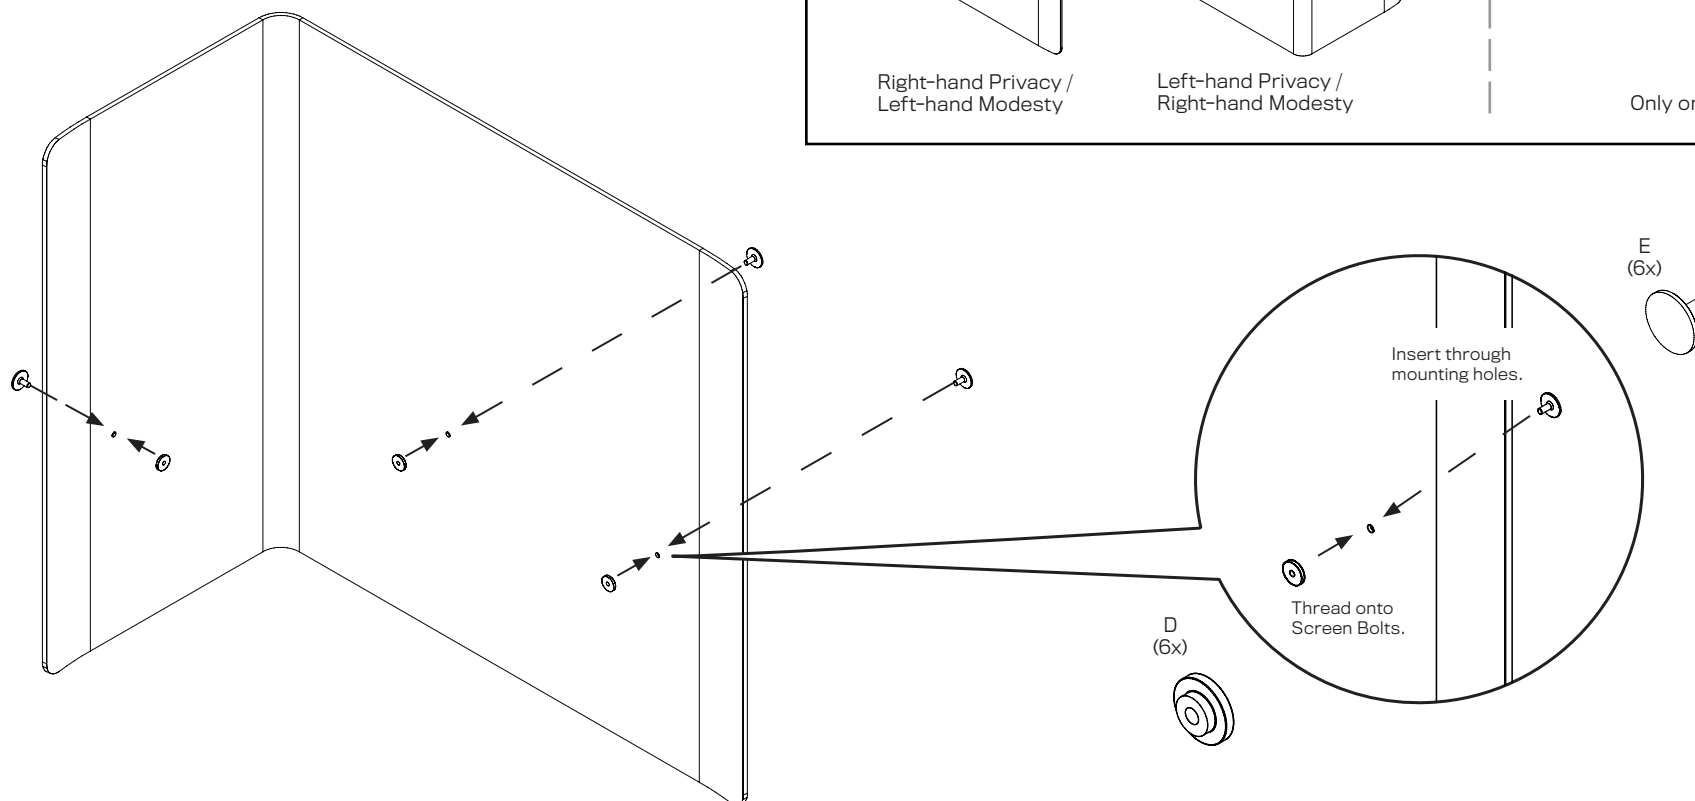

2 INSTALL SCREEN BRACKETS

Place the Screen Brackets (Part F) onto the worksurface and align with predrilled holes.

Attach the Screen Brackets to the underside of the worksurface using the 5 x 20mm Screws (Part G) 18x.

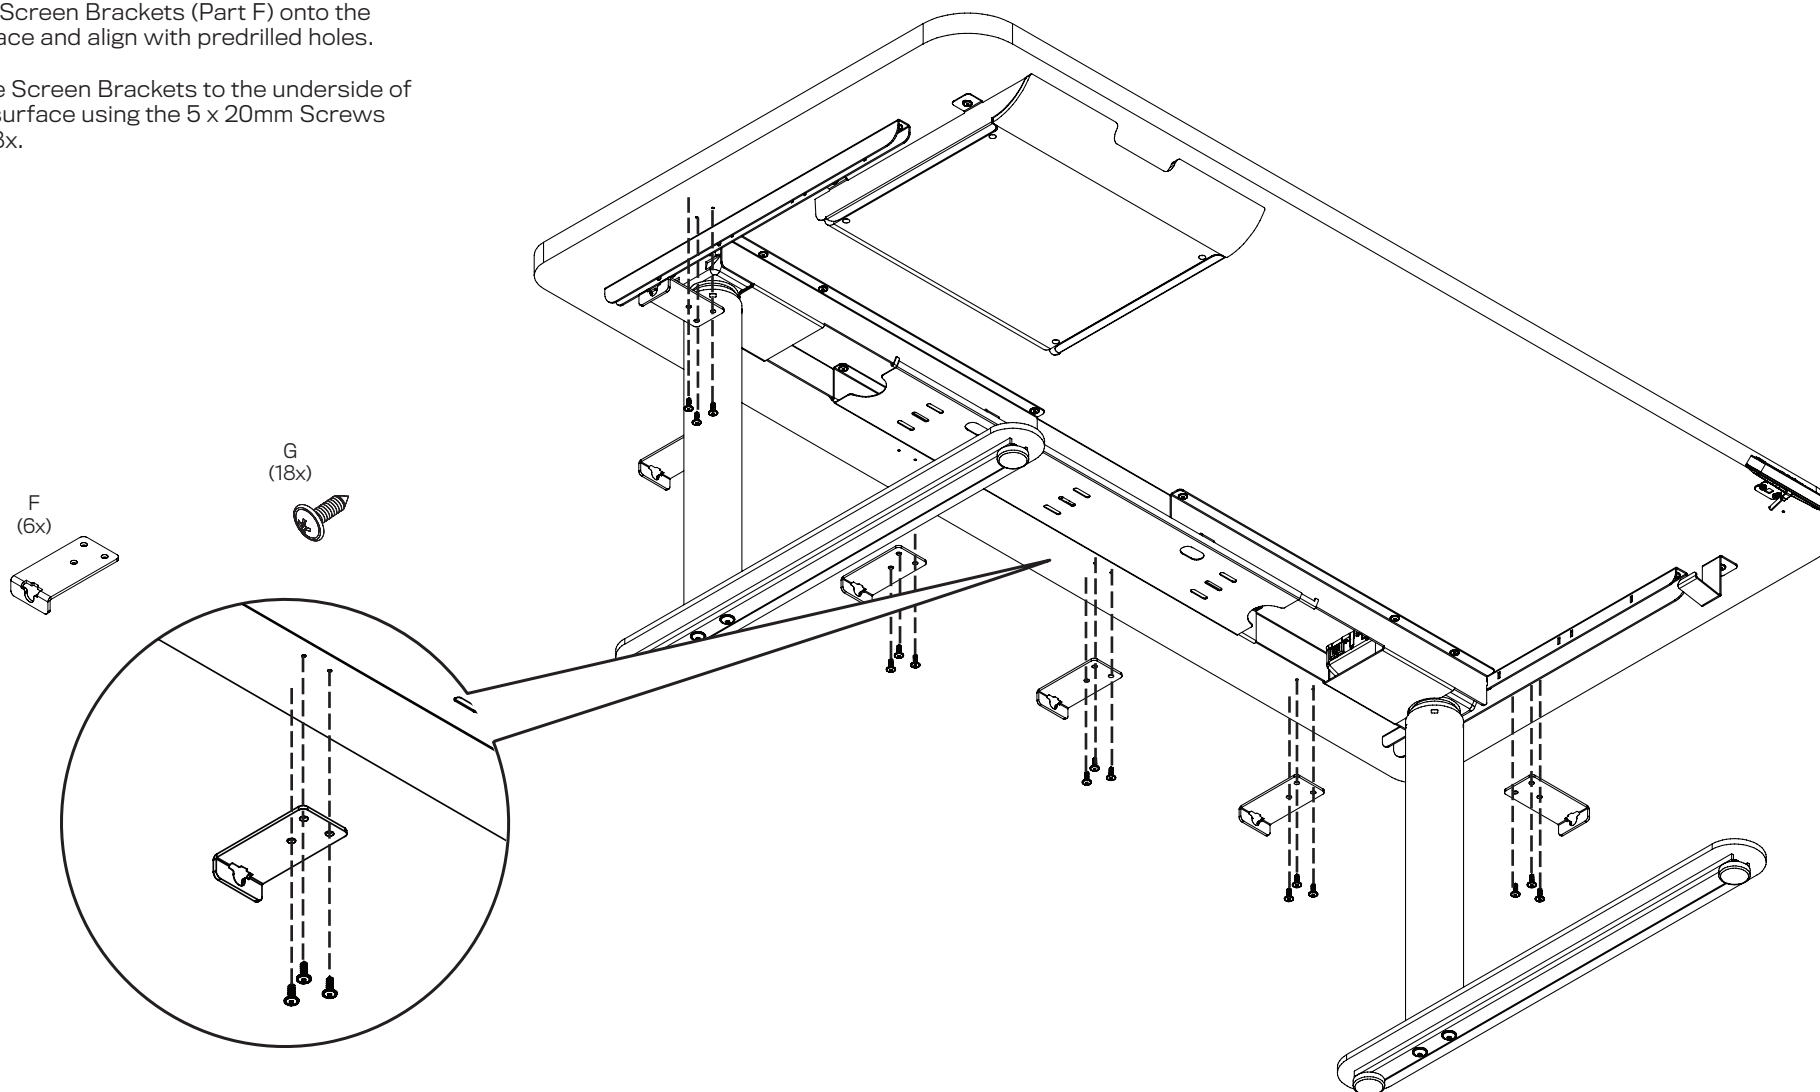

3 INSTALL MODESTY/PRIVACY SCREENS

Slide Modesty/Privacy Screen down onto the Screen Brackets. Connections will "snap" together.

Note: To remove, pull the screens straight UP to "pop" them from the brackets.

